

Betriebsanleitung/Operating Instructions

Schalttafeleinbaugeräte Panel Mounting Devices

> 8003/1





Betriebsanleitung

Schalttafeleinbaugeräte

> 8003/1



1 Inhaltsverzeichnis

1	Inhaltsverzeichnis	2
2	Allgemeine Angaben	
3	Verwendung	
4	Allgemeine Sicherheitshinweise	
5	Normenkonformität	
6	Transport und Lagerung	3
7	Technische Daten	
8	Maßangaben	5
9	Montage und Demontage	
10	Installation	
11	Inbetriebnahme	9
12	Instandhaltung, Wartung und Störbeseitigung	9
13	Zubehör und Ersatzteile	
14	Entsorgung	11
15	EG-Konformitätserklärung	

2 Allgemeine Angaben

2.1 Hersteller

R. STAHL Schaltgeräte GmbH Am Bahnhof 30 74638 Waldenburg Germany

Tel.: +49 7942 943-0 Fax: +49 7942 943-4333 Internet: www.stahl-ex.com

2.2 Angaben zur Betriebsanleitung

ID-NR.: 127303 / 8003607300 Publikationsnummer: 2011-05-04·BA00·III·de·04

Änderungen vorbehalten.

3 Verwendung

Die Schaltafeleinbaugeräte schalten Last-, Steuer- und Signalstromkreise und sind zugelassen für den Einsatz in explosionsgefährdeten Bereichen der Zonen 1 und 2.

Die Typen 8003/1.1 und 8003/1.3 sind komplett bescheinigte explosionsgeschützte Betriebsmittel, geeignet zum Einbau in Gehäusewände, Deckel elektrischer Geräte und Schalttafeln oder Steuerschränke.

Die Typen 8003/1.2 sind unvollständige explosionsgeschützte elektrische Betriebsmittel und müssen in ein Gehäuse der Zündschutzart "Erhöhte Sicherheit" nach IEC/EN 60079-7 eingebaut werden.



Die Geräte sind für die Einlochbefestigung D30 nach EN 50007, in Kombination mit den Betätigungsvorsätzen Typ 8602/2, ausgelegt. Die Standard-Schalter und Standard-Schlüsselschalter sind in allen Stellungen "rastend". Bei den Standard-Schlüsseltastern kann der Schlüssel in allen Stellungen abgezogen werden. Die Schalter können mittels Codierteilen auf die Funktion "tastend" bzw. "rastend, Schlüssel nicht abziehbar" umgebaut werden.

4 Allgemeine Sicherheitshinweise

Die Geräte sind nur für den zugelassenen Einsatzzweck zu verwenden. Fehlerhafter oder unzulässiger Einsatz sowie das Nichtbeachten der Hinweise dieser Betriebsanleitung schließen eine Gewährleistung unsererseits aus. Umbauten und Veränderungen am Gerät, die den Explosionsschutz beeinträchtigen, sind nicht gestattet. Das Gerät darf nur im unbeschädigten und sauberen Zustand betrieben werden.

⚠ WARNUNG

Installation, Instandhaltung, Wartung und Störbeseitigung darf nur von dazu befugtem und entsprechend geschultem Personal durchgeführt werden.

Bei Installation und Betrieb ist Folgendes zu beachten:

- Beschädigungen können den Explosionsschutz aufheben
- ▶ Nationale und örtliche Sicherheitsvorschriften
- Nationale und örtliche Unfallverhütungsvorschriften
- ▶ Nationale und örtliche Montage- und Errichtungsvorschriften (z.B. IEC/EN 60079-14)
- Allgemein anerkannte Regeln der Technik
- Sicherheitshinweise dieser Betriebsanleitung
- ▶ Kennwerte und Bemessungsbetriebsbedingungen der Typ- und Datenschilder
- Zusätzliche Hinweisschilder auf dem Gerät
- ► Typ 8003/1.2: beim Einbau in Gehäuse der Zündschutzart "Erhöhte Sicherheit" sind die Bedingungen der IEC/EN 60079-0 und IEC/EN 60079-7 zu berücksichtigen
- ➤ Typ 8003/1.1 und 8003/1.3: die Rückseite der Geräte muss gegen mechanische Beschädigung geschützt werden

5 Normenkonformität

Die relevanten Normen sind in der EG-Konformitätserklärung bzw. IECEx Certificate of Conformity aufgelistet. Diese Dokumente können auf unserer Homepage www.stahl-ex.com im Download-Bereich abgerufen werden.

6 Transport und Lagerung

Transport und Lagerung sind nur in Originalverpackung gestattet.

7 Technische Daten


	1				
Explosionsschutz					
Gasexplosionsschutz	8003/1.1 8003/1.2 8003/1.3	☑ II 2 G Ex d e IIC T6☑ II 2 G Ex d e IIC☑ II 2 G Ex d e IIC T6			
Gasexplosionsschutz (IECEx)	8003/1.1 8003/1.2 8003/1.3	Ex d e IIC T6 Ex d e IIC Ex d e IIC T6			
Staubexplosionsschutz	8003/1.1 8003/1.3		T80°C		
Staubexplosionsschutz (IECEx)	8003/1.1 8003/1.3	Ex tD A21 IP 65 T80°C			
Bescheinigungen	8003/1.1 8003/1.2 8003/1.3	PTB 02 ATEX 1057 X PTB 02 ATEX 1080 U PTB 02 ATEX 1057 X			
IECEx Zulassung	8003/1.1 8003/1.2 8003/1.3	IECEx PTB 06.0065X IECEx PTB 06.0066U IECEx PTB 06.0065X			
Umgebungstemperatur	- 20 + 60 °C				
	- 55 + 60 °C be	i Ausführungen mit Silikond	ichtung		
Bemessungs- betriebsspannung	max. 550 V				
Bemessungsbetriebsstrom	max. 6 A				
Schaltbild	10503E00	09792E00	09791E00	09790E00	
	8003/11.	8003/12.	8003/13.	8003/14.	
Mindestspannung*	12 V AC / DC				
Mindeststrom*	50 mA				
	* Richtwerte abhä	ngig von den Einsatzbeding	jungen		
Schaltleistung	Bemessungsbetrie	ebsgrenzwerte bezogen auf	die Gebrauchskategorie		
	AC-15	AC-12	DC-13	DC-13	
	500 V max. 6 A max. 1250 VA	500 V max. 6 A max. 3000 VA	60 V max. 6 A	110 V max. 1 A max. 110 W	
Material					
Gehäuse	Polyamid				
Kontaktmaterial					
Standard	Silber-Nickel				
Sonder	Silber-Nickel, verg	goldet			
Lebensdauer					
Kontaktelement	10 ⁶ Schaltspiele				
Schutzart	IP65 (frontseitig IF	P66)			
	Schutzgrad gemä	ß IEC/EN 60529			
Leitungseinführung	Typ 8003/1.1:	M16 x 1,5 (Ø 4 - 9 mm)			
Anschlussquerschnitt	8003/1.1: 0,75 1,5 mm ² 8003/1.2: 0,5 2,5 mm ² 8003/1.3: 4 x 1 mm ² , Anschlussleitung				
Gewicht		Anschlussleitung und Vorsat	z)		
	-				



4

8 Maßangaben


Maßzeichnungen (alle Maße in mm) - Änderungen vorbehalten

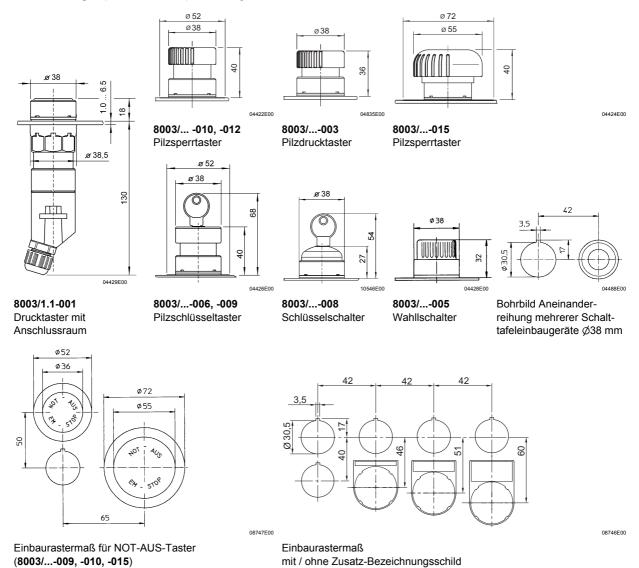

9 Montage und Demontage

Die Schalttafeleinbaugeräte eignen sich für den Einbau in Gehäusewände oder Schalttafeln mit einer Wandstärke von 1,0 ... 6,5 mm. Der Durchmesser der Montagebohrung beträgt 30,5 mm.

Einlochmontage

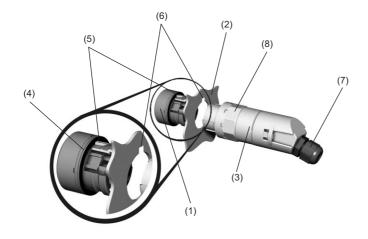

- (1) Betätigungsvorsatz
- (2) Einbauwand
- (3) Schalttafeleinbaugerät
- (4) Dichtung
- (5) Rippe
- (6) Nut
- (7) Kabelverschraubung
- (8) Gewindemutter

Bei der Montage ist zu beachten:

- X Das Schalttafeleinbaugerät (3) darf nicht verkanten.
- X Das Schalttafeleinbaugerät (3) und der Betätigungsvorsatz (1) müssen fest in der Einbauwand (2) sitzen.
- X Die Dichtung (4) muss exakt eingesetzt sein.
- X Anzugsdrehmoment der Gewindemutter: 2,5 Nm.

Montage:

- ▶ Den Betätigungsvorsatz (1) in die Einbauwand (2) stecken und arretieren.
- ▶ Das Schalttafeleinbaugerät (3) von der Rückseite aus, auf den Betätigungsvorsatz (1) stecken
- ▶ Mit der Gewindemutter (8) den Betätigungsvorsatz (1) gegen die Einbauwand (2) festziehen.

↑ WARNUNG

Folgende Montageanweisungen sind bei den Schlüsselschaltern 8003/1..-008 und den Drehgriffen 8003/1..-726 und 8003/1..-727 unbedingt einzuhalten:

- X Die Rippe (5) muss in der Nut (6) der Einbauwand (2) sitzen.
- X Das Schalttafeleinbaugerät (3) muss so aufgesteckt werden, dass die Kabelverschraubung (7) um 180° zur Nut gedreht ist (siehe Bild Einlochmontage: Nut oben, Kabelverschraubung nach unten).



10 Installation

10.1 Elektrischer Anschluss

8003/1.1: Ausführungen mit Federzugklemme und Anschlussraum
8003/1.2: Ausführungen mit Federzugklemme
8003/1.3: Ausführungen mit Anschlussleitung

- ▶ Der Leiteranschluss ist mit besonderer Sorgfalt durchzuführen.
- ▶ Der Leiteranschluss muss bis an die Klemme heranreichen.
- ▶ Beim Abisolieren darf der Leiter nicht beschädigt (eingekerbt) werden.
- ▶ Durch eine geeignete Auswahl der verwendeten Leitungen sowie die Art der Verlegung ist sicherzustellen, dass die maximal zulässigen Leitertemperaturen nicht überschritten werden.
- ▶ Die Angaben im Kapitel "Technische Daten" sind zu beachten.

MARNUNG

Bei Anschluss innerhalb eines explosionsgefährdeten Bereiches muss die Leiterverbindung in einer der Zone entsprechenden Zündschutzart erfolgen.



Anschlussquerschnitte: 8003/1.1: 0,75 ... 1,5 mm² 8003/1.2: 0,5 ... 2,5 mm² 8003/1.3: 4 x 1,0 mm²

Verwendbare Kupferleiter: ein-, mehr-, fein- oder feinstdrähtig

10.2 Ausführungen mit Federzugklemme beim Typ 8003/1.1 Leitungseinführung

Es sind ausschließlich Leitungen mit einem Außendurchmesser von 5 ... 9 mm zu verwenden.



11612T00

- Leitung von hinten in die Kabelverschraubung (1) einführen.
- ▶ Leitung in den Anschlussraumdeckel schieben, bis eine ausreichende Länge zur Leitungsvorbereitung als freies Ende auf der anderen Seite zur Verfügung steht (2).

Leitungsvorbereitung beim Typ 8003/1.1




11613T00

- Leiter 40 mm abmanteln.
- Adern 6 mm abmanteln.

⚠ WARNUNG

Zur Sicherstellung der erforderlichen Luft- und Kriechstrecke muss die vorgegebene Abisolierlänge der Adern (6 mm) genau eingehalten werden.

Leiteranschluss bei den Typen 8003/1.1 und 8003/1.2

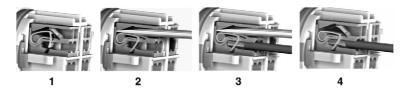

11614T00

- ▶ (1) Schnittdarstellung Federzugklemme.
- ▶ Federzugklemme (2) mit einem Schlitzschraubendreher (0,6x3,5 mm Form A, DIN 5264/ISO 2380-1) öffnen. Die Schraubendreherschneide hält die Federzugklemme geöffnet, so dass der Leiter eingeführt werden kann.
- ► Vorbereiteten Leiter (3) einführen.
- Schraubendreher entfernen, der Leiter ist sicher geklemmt (4).


Verschließen des Anschlussraums beim Typ 8003/1.1

Anschlussraum geöffnet



11615T0

Anschlussraumdeckel aufschieben

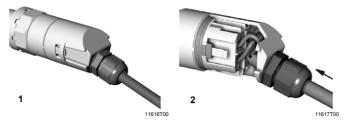

- Anschlussdeckel auf Klemmenträger (1) schieben bis dieser einrastet.
- Leitung in Richtung Anschlussraumdeckel (2) schieben.
- ▶ Mutter der Verschraubung mit einem Drehmoment von ca. 1,3 Nm anziehen. Der Anschlussraum ist dicht verschlossen.

⚠ WARNUNG

- ► Kabel oder Leitungen müssen fest installiert werden.
- Eine Zugentlastung ist vorzusehen.



Öffnen des Anschlussraums beim Typ 8003/1.1



11618T0

- Anschlussraum nur mit geeignetem Werkzeug öffnen, z.B. Schlitzschraubendreher 0,6 x 3,5.
- ► Schraubendreher an einer Lasche ansetzen und um 90° drehen.
- Anschlussraumdeckel etwas zurückziehen und in dieser Stellung halten.
- ► Schraubendreher an der zweiten Lasche ansetzen und um 90° drehen.
- Anschlussraumdeckel abnehmen.

11 Inbetriebnahme

Vor Inbetriebnahme

- Sicherstellen, dass das Gerät nicht beschädigt ist.
- ▶ Sicherstellen, dass das Gerät vorschriftsmäßig installiert ist.
- Fremdkörper aus dem Gerät entfernen.
- ► Kabelverschraubungen auf festen Sitz prüfen.
- Schrauben und Muttern auf festen Sitz prüfen.
- Anzugsdrehmomente kontrollieren.

12 Instandhaltung, Wartung und Störbeseitigung

↑ WARNUNG

Nicht unter Spannung öffnen!

Bei der Wartung sind folgende Punkte zu überprüfen:

- ✗ Einhaltung der zulässigen Temperaturen (gemäß IEC/EN 60079)
- X Beschädigungen am Gehäuse und an den Dichtungen
- X Fester Sitz der Leitungen

13 Zubehör und Ersatzteile

Es ist pur Origi	nal Zubobi		WARNUN		O CTAUL 711.	onwondon
Es ist nur Origin	-		ıııaı-EISalz	Liene dei Fä. I		
Bezeichnung	Abbildung	Beschreibung			Art.Nr.	Gewicht kg
Ersatzschlüssel		für alle Schlüsse	eltaster / Schlüss	selschalter		- I
	6	Standardschließ	ung MS1		107109	0,008
	10545E00	Sonderschließur	ng MS2 MS20	(als Text angeben)	107110	0,008
Verschlussteil	10040200		en unbenutzter [Deckelbohrungen	155329	0,016
	05647E00	Ø 30,5 mm		-		
Zusatz- Bezeichnungsschild		Schildträger, Grö Beschriftung: 1-2	zeilig		155632	0,001
		Schildträger, Grö Beschriftung: 1-	oder 2-zeilig		155687	0,002
	05543E00	Schildträger, Grö Beschriftung: 1-,	2- oder 3-zeilig	<u>. </u>	155844	0,002
		für Betätigungsvo Ø 30,5 mm	orsätze einbaub	ar in Bohrungen		
		Einlegeschilder:			_	
			mit Beschriftu angeben:	ng; Texte im Klartext		
			HAND - 0 - AI			
			OFF - • - ON 0 - I	0 - I - II 0 - Betrieb	-1	
			I - II	0 - • - I	- 1	
Umbauaata für	-	I Imbougate Cad	iortoilo für Cabi	ionalachaltar		_
Umbausatz für Schlüsselschalter	1	Umbausatz Cod Typ 8003/008		isseischalter		
Comacociconator	Sindoscisorianei		Codierteil, 1 x rot, 1 x gelb		155432	0,001
		Codierteil, 2 x ge			155373	0,001
		Codierteil, 1 x gr			155403	0,001
Unterlegschild, gelb		für Taster mit NC		n		0,000
	O	Ø 38 mm			130391	0,001
	05024E00	Ø 55 mm			130524	0,002
Betätigungsvorsatz		für Drucktaster		8003/001	155525	0,023
	05733E00	für Pilzdrucktaste Ø 38 mm, schwa		8003/003	155526	0,028
	05538E00	für Pilzsperrtaste Ø 38 mm, rot (N		8003/010	155531	0,030
	05536E00	für Pilzsperrtaste Ø 38 mm, schwa		8003/012	155541	0,030
		für Pilzsperrtaste Ø 55 mm, rot (Ne		8003/015	155532	0,033
	05533E00	für Pilzschlüssel Ø 38 mm, rot (Ne		8003/009	155530	0,062
	05537E00	für Schlüsselsch mit 2 Schaltstellu		8003/008-2	155528	0,049
	05734E00	für Schlüsselsch mit 3 Schaltstellu		8003/008-3	155529	0,049
		für Wahlschalter		8003/005	155527	0,030
	05535E00					



Bezeichnung	Abbildung	Beschreibung	I	Art.Nr.	Gewicht kg
Einlegeschild für	Store Fin	Farbe	Text		J
Drucktaster und Wahlschalter	START	blau	Leerschild (Text angeben)	155910	0,001
	05753E00	gelb	Leerschild (Text angeben)	155913	0,001
		rot	Leerschild (Text angeben)	155896	0,001
		grün	Leerschild (Text angeben)	155900	0,001
		weiß	Leerschild (Text angeben)	155907	0,001
		schwarz	Leerschild (Text angeben)	155904	0,001
		blau	Leerschild	155911	0,001
		gelb	Leerschild	155914	0,001
		rot	Leerschild	155897	0,001
		grün	Leerschild	155901	0,001
		weiß	Leerschild	155908	0,001
		schwarz	Leerschild	155905	0,001
		schwarz	I	155846	0,001
		grün	ı	155689	0,001
		weiß	ı	155892	0,001
		schwarz	II	155854	0,001
		grün	II	155706	0,001
		rot	0	155596	0,001
		schwarz	0	155783	0,001
		schwarz	I 0	155771	0,001
		rot	$\overset{\rightarrow}{\leftarrow}$	155567	0,001
		schwarz	⇉	155736	0,001
		schwarz	<u> </u>	155749	0,001
		schwarz	7	155761	0,001
		schwarz	CLOSE	155878	0,001
		schwarz	Zu	155874	0,001
		schwarz	Open	155868	0,001
		schwarz	EIN	155862	0,001
		rot	OFF	155654	0,001
		rot	Aus	155634	0,001
		schwarz	Aus	155806	0,001
		rot	STOP	155615	0,001
		schwarz	STOP	155795	0,001
		grün	START	155721	0,001
		weiß	START	155889	0,001
		blau	RESET	155894	0,001
		grün	ON	155671	0,001
		schwarz	Auf	155883	0,001
		schwarz	Ab	155886	0,001
		schwarz	Links	155827	0,001
		schwarz	Rechts	155837	0,001

14 Entsorgung

Die nationalen Vorschriften zur Abfallbeseitigung sind zu beachten.



15 EG-Konformitätserklärung

EG-Konformitätserklärung EC-Declaration of Conformity Déclaration de Conformité CE



Wir; we; nous

R. STAHL Schaltgeräte GmbH, Am Bahnhof 30, 74638 Waldenburg, Germany

8003/1.1 8003/1.3

erklären in alleiniger Verantwortung, dass das Produkt hereby declare in our sole responsibility, that the product déclarons, sous notre seule responsabilité, que le produit

mit der under avec **EG-Baumusterprüfbescheinigung:** *EC-Type Examination Certificate: Attestation d'examen CE de type:*

Taster für Schalttafeleinbau Push button for panel mounting Bouton poussoir pour encastrement

PTB 02 ATEX 1057 X (Physikalisch-Technische Bundesanstalt Bundesallee 100, 38116 Braunschweig)

auf das sich diese Erklärung bezieht, mit den folgenden Normen oder normativen Dokumenten übereinstimmt which is the subject of this declaration, is in conformity with the following standards or normative documents auquel cette déclaration se rapporte, est conforme aux normes ou aux documents normatifs suivants

Bestimmungen der Richtlinie Terms of the directive Prescription de la directive	Nummer sowie Ausgabedatum der Norm Number and date of issue of the standard Numéro ainsi que date d'émission de la norme
94/9/EG: ATEX-Richtlinie 94/9/EC: ATEX Directive 94/9/CE: Directive ATEX	EN 60079-0: 2006 EN 60079-1: 2007 EN 60079-7: 2007 EN 61241-0: 2006 EN 61241-1: 2004
2004/108/EG: EMV-Richtlinie 2004/108/EC: <i>EMC Directive</i> 2004/108/CE: <i>Directive CEM</i>	

Waldenburg, 02. Nov. 2010

Ort und Datum Place and date Lieu et date J.-P. Rückgauer Leiter Entwicklung und Technik Director Design and Technology Directeur Développement et Technique i.V.

Dr. S. Jung Leiter Qualitätsmanagement Director Quality Management Dept. Directeur Dép. Assurance de Qualité

F-4174-601 11/2009 STMZ

8003602020_00



EG-Konformitätserklärung

EC-Declaration of Conformity Déclaration de Conformité CE



Wir; we; nous

R. STAHL Schaltgeräte GmbH, Am Bahnhof 30, 74638 Waldenburg, Germany

8003/1.2 8003/1.4

erklären in alleiniger Verantwortung, dass das Produkt hereby declare in our sole responsibility, that the product déclarons, sous notre seule responsabilité, que le produit

mit der EG-

avec

EG-Baumusterprüfbescheinigung: EC-Type Examination Certificate: Attestation d'examen CE de type:

Taster für Schalttafeleinbau Push button for panel mounting Bouton poussoir pour encastrement

PTB 02 ATEX 1080 U (Physikalisch-Technische Bundesanstalt Bundesallee 100, 38116 Braunschweig)

auf das sich diese Erklärung bezieht, mit den folgenden Normen oder normativen Dokumenten übereinstimmt which is the subject of this declaration, is in conformity with the following standards or normative documents auquel cette déclaration se rapporte, est conforme aux normes ou aux documents normatifs suivants

Bestimmungen Terms of the dir Prescription de	ective	Nummer sowie Ausgabedatum der Norm Number and date of issue of the standard Numéro ainsi que date d'émission de la norme
94/9/EC: ATE	EX-Richtlinie EX Directive ective ATEX	EN 60079-0: 2006 EN 60079-1: 2007 EN 60079-7: 2007
2004/108/EG: 2004/108/EC: 2004/108/CE:	EMV-Richtlinie EMC Directive Directive CEM	

Waldenburg, 02. Nov. 2010

Ort und Datum
Place and date
Lieu et date

J.-P. Rückgauer

Leiter Entwicklung und Technik Director Design and Technology Directeur Développement et Technique Dr. S. Jung

i.V.

Leiter Qualitätsmanagement Director Quality Management Dept. Directeur Dép. Assurance de Qualité

F-4174-601 11/2009 STMZ

8003601020_00







Operating Instructions

Panel Mounting Devices

> 8003/1



1 Contents

1	Contents	2
2	General Information	
3	Intended Use	2
4	General Safety Instructions	
5	Conformity to Standards	
6	Transport and Storage	
7	Technical Data	
8	Dimensions	5
9	Assembling and Dismantling	6
10	Installation	
11	Putting into Service	9
12	Maintenance, Overhaul and Repair	
13	Accessories and Spare Parts	10
14	Disposal	11
15	EC Declaration Of Conformity	
16	IOM sheet	14

2 General Information

2.1 Manufacturer

R. STAHL Schaltgeräte GmbH Am Bahnhof 30 74638 Waldenburg Germany

Tel: +49 7942 943-0 Fax: +49 7942 943-4333 Internet: www.stahl-ex.com

2.2 Operating Instructions Information

ID-No.: 127303 / 8003607300 Publication Code: 2011-05-04·BA00·III·en·04

Subject to alterations.

3 Intended Use

The panel mounting devices switch load, control and signal circuits and are certified for use in hazardous areas of Zones 1 and 2.

Types 8003/1.1 und 8003/1.3 are complete certified explosion-protected equipment suitable for installation in enclosure walls, covers of electric devices, switch panels or control cabinets.

Types 8003/1.2 are incomplete, explosion-protected electrical equipment suitable for installation in enclosures of type of protection "increased safety" according to IEC/EN 60079-7.



The devices are designed for single-hole mounting D 30 to EN 50007 in combination with actuators Type 8602/2. The standard switches and standard key-operated switches are "latching" in all positions. In the standard key-operated buttons, the key is withdrawable in all positions. Due to integration of coding elements, the switches can be converted to the "spring return" or "latching, key non-withdrawable" functions.

4 General Safety Instructions

The devices must be used only for the permitted purpose. Incorrect or impermissible use or non-compliance with these instructions invalidates our warranty provision. Any alterations and modifications to the device impairing its explosion protection are not permitted. Use the device only if it is undamaged and clean.

⚠ WARNING

Installation, maintenance, overhaul and repair may only be carried out by appropriately authorised and trained personnel.

Observe the following information during installation and operation:

- Any damage can invalidate the explosion protection
- ▶ National and local safety regulations
- National and local accident prevention regulations
- ▶ National and local assembly and installation regulations (e.g. IEC/EN 60079-14)
- Generally recognized technical regulations
- ▶ Safety instructions in these operating instructions
- ► Characteristic values and rated operating conditions on the rating and data plates
- ► Additional instruction plates fixed directly to the device
- ► Type 8003/1.2: when installed in enclosures of type of protection "increased safety", the conditions given in IEC/EN 60079-0 and IEC/EN 60079-7 must be observed
- ➤ Types 8003/1.1 and 8003/1.3: the backs of the devices must be protected against mechanical damage

5 Conformity to Standards

The relevant standards are listed in the EC Declaration of Conformity or IECEx Certificate of Conformity. These documents are available for download in the download area on the internet page www.stahl-ex.com.

6 Transport and Storage

► Transport and storage are only permitted in the original packing.




7 Technical Data

Evaluation protection	ı				
Explosion protection	0000/4.4	50 H 0 0 For all a H0 T0			
Gas explosion protection	8003/1.1 8003/1.2 8003/1.3	☑ II 2 G Ex d e IIC T6☑ II 2 G Ex d e IIC☑ II 2 G Ex d e IIC T6			
Gas explosion protection (IECEx)	8003/1.1 8003/1.2 8003/1.3	Ex d e IIC T6 Ex d e IIC Ex d e IIC T6			
Dust explosion protection	8003/1.1 8003/1.3	€ II 2 D Ex tD A21 IP65	T80°C		
Dust explosion protection (IECEx)	8003/1.1 8003/1.3	Ex tD A21 IP 65 T80°C			
Certificates	8003/1.1 8003/1.2 8003/1.3	PTB 02 ATEX 1057 X PTB 02 ATEX 1080 U PTB 02 ATEX 1057 X			
IECEx certification	8003/1.1 8003/1.2 8003/1.3	IECEX PTB 06.0065X IECEX PTB 06.0066U IECEX PTB 06.0065X			
Ambient temperature	- 20 + 60 °C				
	- 55 + 60 °C for	versions with silicone seal			
Rated operational voltage	max. 550 V				
Rated operational current	max. 6 A				
Schematic	10503E00	09792E00	09791E00	09790E00	
	8003/11.	8003/12.	8003/13.	8003/14.	
Min. voltage*	12 V AC / DC				
Min. current*	50 mA				
	* Typical values de	ependent on conditions of u	se		
Switching capacity	Rated operating cl	naracteristics according to u	itilisation category		
	AC-15	AC-12	DC-13	DC-13	
	500 V max. 6 A max. 1250 VA	500 V max. 6 A max. 3000 VA	60 V max. 6 A	110 V max. 1 A max. 110 W	
Material					
Enclosure	Polyamide				
Contact material					
Standard	Silver-nickel				
Special	Silver-nickel, gold-	-plated			
Service life					
Contact element	10 ⁶ operating cycles				
Degree of protection	IP65 (front side IP	66)			
	Degree of protection acc. to IEC/EN 60529				
Cable entry	Type 8003/1.1:	M16 x 1.5 (Ø 4 - 9 mm)			
Connection cross-section	0.75 1.5 mm ²				
Weight	0.0825 kg (withou	t connecting cable and actu	ator)		



8 Dimensions


Dimensional Drawings (All Dimensions in mm) - Subject to Alterations

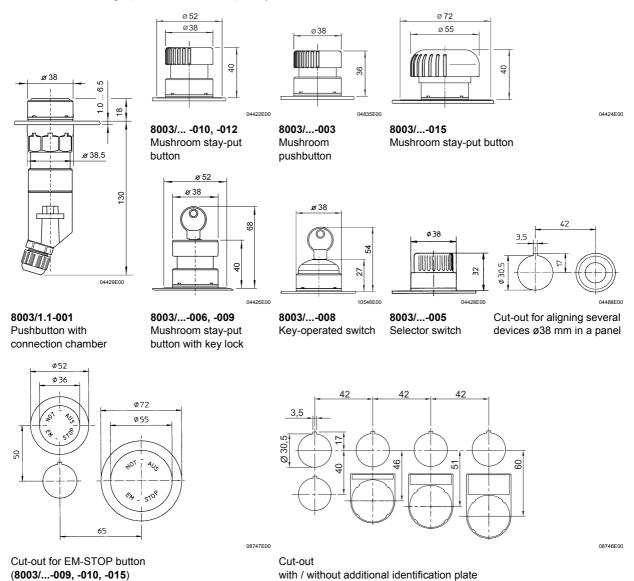

9 Assembling and Dismantling

The panel mounting devices are suitable for installation in enclosure walls or switch panels with a wall thickness of 1.0 ... 6.5 mm. The mounting hole diameter is 30.5 mm.

Single hole mounting

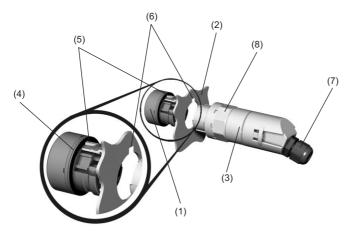

- (1) Actuator
- (2) Installation wall
- (3) Panel mounting device
- (4) Seal
- (5) Rib
- (6) Groove
- (7) Cable gland
- (8) Threaded nut

11610F00

When assembling, please note that:

- X The panel mounting device (3) may not be set at an angle!
- X The panel mounting device (3) and the actuator (1) must be firmly attached in the installation wall (2).
- X The seal (4) must be precisely inserted.
- X Tightening torque of the threaded nut: 2.5 Nm.

Assembling:

- ▶ Push the actuator (1) into the installation wall (2) and lock it into position.
- ▶ Push the panel-mounting fixture (3) onto the actuator (1) from the back of the installation wall.
- ➤ Tighten the actuator (1) against the installation wall (2) to which it is fitted by turning the threaded nut (8).

⚠ WARNING

For key-operated switches 8003/1..-008 and rotary actuators 8003/1..-726 and 8003/1..-727 the following mounting instructions must be observed:

- X The rib (5) must sit properly in the groove (6) in the installation wall (2).
- The panel-mounting fixture (3) must be inserted in such a way that the cable gland (7) is rotated by 180°, relative to the groove (see single hole mounting figure: groove at the top, cable gland downward



10 Installation

10.1 Electrical Connection

8003/1.1: versions with spring clamp terminal and connection chamber
8003/1.2: versions with spring clamp terminal
8003/1.3: versions with connecting cable

- ▶ The conductor must be carefully connected.
- ▶ The conductor connection must reach to the terminal.
- ▶ When stripping the insulation, the conductor must not be damaged (nicked).
- ➤ To ensure that the maximum permissible conductor temperatures are not exceeded, select suitable cables and means of running them.
- ▶ The information given in chapter "Technical Data" must be observed.

⚠ WARNING

Please note that when connecting the device within a hazardous area, the connection must be made in a type of protection corresponding to the zone.



Connection cross-sections: 8003/1.1: 0.75 ... 1.5 mm² 8003/1.2: 0.5 ... 2.5 mm² 8003/1.3: 4 x 1.0 mm²

Usable copper conductors: single wire, stranded, finely or very finely stranded

10.2 Versions with Spring Clamp Terminal for Type 8003/1.1 Cable gland

Use only cables that have an outer diameter of 5 ... 9 mm.



11612T00

- ▶ Push the cable into the cable gland (1) from behind.
- ▶ Push the cable into the connection chamber cover until there is a sufficient length left free on the other side to enable connections to be prepared (2).

Preparing the cable for type 8003/3.1



11613T00

- Strip 40 mm of the insulation of the conductor.
- Strip 6 mm of the insulation of the wires.

⚠ WARNING

To ensure the required clearance and creepage distance, the specified stripping length of the wires (6 mm) must be precisely complied with.

Conductor connection for types 8003/1.1 and 8003/1.2



11614T00

- ▶ (1) Sectional view of the spring clamp terminal.
- ▶ Open the spring clamp terminal (2) using a slotted screwdriver (0.6x3.5 mm form A, DIN 5264/ISO 2380-1). The screwdriver blade holds the spring clamp terminal open, thus enabling the conductor to be introduced.
- Introduce the prepared conductor (3).
- ▶ Remove the screwdriver, thus securely clamping the conductor (4).


Closing the connection chamber of type 8003/1.1

Connection chamber open



11615T0

Opening the connection chamber cover

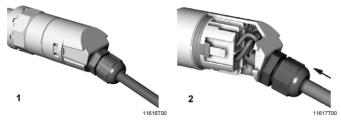

- ▶ Push the connection cover onto the terminal support (1) until it snaps into place.
- ▶ Push the cable toward the connection chamber cover (2).
- ▶ Tighten the gland nut to a torque of approx. 1.3 Nm. The connection chamber is now tightly sealed.

↑ WARNING

- Cables must be fixed in position.
- A strain relief must be provided.



Opening the connection chamber of type 8003/1.1



11618T0

- ▶ Open the connection chamber only if you have a suitable tool, for example a slotted screwdriver 0.6 x 3.5.
- ▶ Position the screwdriver against one of the latching tabs and turn it by 90°.
- Slightly pull back the connection chamber cover and hold it in this position.
- ▶ Position the screwdriver against the second latching tab and turn it by 90°.
- Remove the connection chamber cover.

11 Putting into Service

Before putting into service

- ▶ Make sure that the device is not damaged.
- ▶ Make sure that the device has been installed correctly.
- Remove any foreign objects from the device.
- Check whether the cable glands have been tightened properly.
- Check whether screws and nuts have been tightened properly.
- Check the tightening torques.

12 Maintenance, Overhaul and Repair

⚠ WARNING

Do not open when live!

The following details must be checked during maintenance:

- Compliance with the permitted temperatures (acc. to IEC/EN 60079)
- X Damage to the enclosure and seals
- X Cables are held securely in place

13 Accessories and Spare Parts

		<u></u> MARNIN			
Jse only origin	al R. STAH	L accessories and spar	e parts.		
Designation	Illustration	Description		Art. no.	Weight kg
Spare key		for all key-operated buttons / key-	operated switches		
	1 60 /°	Standard locking MS1		107109	0.008
	10545E00	Special locking MS2 MS20 (sp	ecify as text)	107110	0.008
Closing part	05647E00	for closing of unused mounting ho	oles Ø 30.5 mm	155329	0.016
Additional dentification plate	33071230	Label mount, size 1, without symleter: 1 line	ool label	155632	0.001
		Label mount, size 2, without syml Text: 1 or 2 lines	155687	0.002	
	05543E00	Label mount, size 3, without syml Text: 1, 2 or 3 lines	ool label	155844	0.002
		for actuators to fit Ø 30.5 mm hole	es		
		Symbol labels: without text			
		with text; pleas	e specify text:	1	
		• •	. ,		
		HAND - 0 - AU' OFF - • - ON	TO I - 0 - II 0 - I - II		
		0 - 1	0 - Betrieb - I		
		I - II	0 - • - 1		
Ondina liktor		Coding his for how an arest of a witch	Turas 0000/ 000		_
Coding kit for key-operated switch		Coding kit for key-operated switches Types 8003/008		155432	0.001
ley operated switch	County Clothont, 1 x 10a, 1 x your			0.001	
		Coding element, 2 x yellow		155373	0.001
Support plata, vallau		Coding element, 1 x green, 1 x red		155403	0.001
Support plate, yellow		for buttons with EM-STOP function Ø 38 mm		120201	0.000
	9	Ø 55 mm		130391	0.001
Actuator	05024E00		8003/001	150524	0.002
Actuator	05733E00	for pushbuttons	6003/001	155525	0.023
	05538E00	for mushroom pushbuttons Ø 38 mm, black	8003/003	155526	0.028
		for mushroom stay-put buttons ϕ 38 mm, red (EM-STOP)	8003/010	155531	0.030
	05536E00	for mushroom stay-put buttons $ ot\!\!/ 38 \text{ mm, black} $	8003/012	155541	0.030
		for mushroom stay-put buttons Ø 55 mm, red (EM-STOP)	8003/015	155532	0.033
	05533E00 05537E00	for mushroom stay-put buttons with key lock Ø 38 mm, red (EM-STOP)	8003/009	155530	0.062
		for key-operated switches with 2 switching positions	8003/008-2	155528	0.049
	05734E00	for key-operated switches with 3 switching positions	8003/008-3	155529	0.049
		for selector switches	8003/005	155527	0.030



Designation	Illustration	Description		Art. no.	Weight kg
Symbol label for	Y ₁₀	Colour	Text		n-g
pushbutton and selector switch	START START	blue	Plain label (specify text)	155910	0.001
	05753E00	yellow	Plain label (specify text)	155913	0.001
		red	Plain label (specify text)	155896	0.001
		green	Plain label (specify text)	155900	0.001
		white	Plain label (specify text)	155907	0.001
		black	Plain label (specify text)	155904	0.001
		blue	Plain label	155911	0.001
		yellow	Plain label	155914	0.001
		red	Plain label	155897	0.001
		green	Plain label	155901	0.001
		white	Plain label	155908	0.001
		black	Plain label	155905	0.001
		black	I	155846	0.001
		green	I	155689	0.001
		white	I	155892	0.001
		black	II	155854	0.001
		green	II	155706	0.001
		red	0	155596	0.001
		black	0	155783	0.001
		black	10	155771	0.001
		red	\rightarrow	155567	0.001
		black	⇉	155736	0.001
		black	↑	155749	0.001
		black	1	155761	0.001
		black	CLOSE	155878	0.001
		black	Zu	155874	0.001
		black	Open	155868	0.001
		black	EIN	155862	0.001
		red	OFF	155654	0.001
		red	Aus	155634	0.001
		black	Aus	155806	0.001
		red	STOP	155615	0.001
		black	STOP	155795	0.001
		green	START	155721	0.001
		white	START	155889	0.001
		blue	RESET	155894	0.001
		green	ON	155671	0.001
		black	Auf	155883	0.001
		black	Ab	155886	0.001
		black	Links	155827	0.001
		black	Rechts	155837	0.001

14 Disposal

The national waste disposal regulations have to be observed.



EC Declaration Of Conformity

EG-Konformitätserklärung EC-Declaration of Conformity Déclaration de Conformité CE



Wir; we; nous

R. STAHL Schaltgeräte GmbH, Am Bahnhof 30, 74638 Waldenburg, Germany

8003/1.1 8003/1.3

erklären in alleiniger Verantwortung, dass das Produkt hereby declare in our sole responsibility, that the product déclarons, sous notre seule responsabilité, que le produit

under avec

EG-Baumusterprüfbescheinigung: EC-Type Examination Certificate: Attestation d'examen CE de type:

Taster für Schalttafeleinbau Push button for panel mounting Bouton poussoir pour encastrement

PTB 02 ATEX 1057 X (Physikalisch-Technische Bundesanstalt Bundesallee 100, 38116 Braunschweig)

auf das sich diese Erklärung bezieht, mit den folgenden Normen oder normativen Dokumenten übereinstimmt which is the subject of this declaration, is in conformity with the following standards or normative documents auquel cette déclaration se rapporte, est conforme aux normes ou aux documents normatifs suivants

Bestimmungen der Richtlinie Terms of the directive Prescription de la directive	Nummer sowie Ausgabedatum der Norm Number and date of issue of the standard Numéro ainsi que date d'émission de la norme
94/9/EG: ATEX-Richtlinie 94/9/EC: ATEX Directive 94/9/CE: Directive ATEX	EN 60079-0: 2006 EN 60079-1: 2007 EN 60079-7: 2007 EN 61241-0: 2006 EN 61241-1: 2004
2004/108/EG: EMV-Richtlinie 2004/108/EC: <i>EMC Directive</i> 2004/108/CE: <i>Directive CEM</i>	

Waldenburg, 02. Nov. 2010

Ort und Datum Place and date Lieu et date

J.-P. Rückgauer Leiter Entwicklung und Technik Director Design and Technology Directeur Développement et Technique i.V.

Dr. S. Jung Leiter Qualitätsmanagement Director Quality Management Dept. Directeur Dép. Assurance de Qualité

F-4174-601 11/2009 STMZ

8003602020 00



EG-Konformitätserklärung

EC-Declaration of Conformity Déclaration de Conformité CE



Wir; we; nous

R. STAHL Schaltgeräte GmbH, Am Bahnhof 30, 74638 Waldenburg, Germany

8003/1.2 8003/1.4

erklären in alleiniger Verantwortung, dass das Produkt hereby declare in our sole responsibility, that the product déclarons, sous notre seule responsabilité, que le produit

mit der under avec EG-Baumusterprüfbescheinigung: EC-Type Examination Certificate:

Attestation d'examen CE de type:

Taster für SchalttafeleinbauPush button for panel mounting
Bouton poussoir pour encastrement

PTB 02 ATEX 1080 U

(Physikalisch-Technische Bundesanstalt Bundesallee 100, 38116 Braunschweig)

auf das sich diese Erklärung bezieht, mit den folgenden Normen oder normativen Dokumenten übereinstimmt which is the subject of this declaration, is in conformity with the following standards or normative documents auquel cette déclaration se rapporte, est conforme aux normes ou aux documents normatifs suivants

Terms of the directive		Nummer sowie Ausgabedatum der Norm Number and date of issue of the standard Numéro ainsi que date d'émission de la norme
94/9/EC: ATE	EX-Richtlinie EX Directive ective ATEX	EN 60079-0: 2006 EN 60079-1: 2007 EN 60079-7: 2007
2004/108/EG: 2004/108/EC: 2004/108/CE:	EMV-Richtlinie EMC Directive Directive CEM	

Waldenburg, 02. Nov. 2010

Ort und Datum Place and date Lieu et date J.-P. Rückgauer Leiter Entwicklung und Technik

Director Design and Technology Directeur Développement et Technique Dr. S. Jung

i.V.

Leiter Qualitätsmanagement Director Quality Management Dept. Directeur Dép. Assurance de Qualité

F-4174-601 11/2009 STMZ

8003601020_00



16 IOM sheet



R. STAHL, INC.

9001 Knight Road Houston, TX 77054 Tel: 800-782-4357 FAX: 713-792-9301 E-mail: sales@rstahl.com Website: www.rstahl.com

INSTALLATION OPERATION & MAINTENANCE SHEET



Panel Mounted Pushbuttons and Selector Switches

Please read this entire document before beginning any work.



1. Safety Instructions

Installation and maintenance of these devices should only be performed by qualified personnel in accordance with the National Electrical Code (NEC) (NFPA 70) or the Canadian Electrical Code (CEC) and any applicable code regulations.

CAUTION:

- Disconnect power supply before installing or servicing these devices.
- Operate only undamaged devices with observations of the operating parameters in Section 2.

2. Technical Data

Please refer to the technical data on the device.

2.1 Certifications

File No. E182378

Class I, Zone 1, AEx de IIC T6
Class I, Zone 1, Ex de IIC T6

Class I, Div. 2, Groups A,B,C & D



See information on the device

- 2.2 Ambient temperature range: -30°C to +55°C.
- 2.3 Storage temperature range: -55°C to +100°C.
- 2.4 Environmental protection type: 3, 4; 4x IP66/IP20 at terminals depending on enclosure (see section 3).

2.5 General electrical data:

- **2.5.1** Cage clamp terminal capacity: 2x 18 AWG to 2x 12 AWG.
- 2.5.2 Switching capacity: AC, 600V, 10A max. (A600).
- 2.5.3 Lowest Energy: 12V AC/DC, 50mA.
- 2.5.4 Contact Arrangements: See nameplate on the device. Contact numbers on the device are embossed next to the terminal openings.

3. Installation of devices 8003/1.

These explosion protected electrical devices are typically installed in an electrical panel or enclosure. The types of enclosures needed for the different area classifications indicated in the left column of the table below, are stated in the middle or right column.

Enclosure Type Rating For Installation

Area Classification of Use	Devices with Cap 8003/1•1 or with Cap & Lead 8003/1•3	Devices with Cage Clamps 8003/1•2 (without Cap)
Class I, Zone 1	Enclosure Type① 1, 2, 3, 3R, 4, 4X, 12, 13	Enclosure AEx e or Ex e
Class I, Division 2 Groups A, B, C, & D	Enclosure Type 1, 2 ,3, 3R, 4, 4X, 12, 13	


①Terminate leads in AEx e Terminal Box

3.1 Punching Knock-outs

- Punch 1.2" diameter knock-outs (30.5mm) into the panel. These devices can be mounted into walls between 0.04 - 0.25" (1.0 ... 6.5mm)
- Observe the clearances.

3.2 Removing the actuator from the contact block:

- Turn the retainer nut counter-clockwise as far as it will go.
- Pull off the actuator.

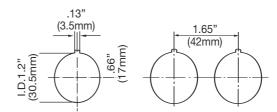

When installing devices with terminal cap, type 8003/1•1, skip section 4.

80 036 08 30 0 1/4 December 13, 2006






R. STAHL, INC.

9001 Knight Road Houston, TX 77054 Tel: 800-782-4357 FAX: 713-792-9301 E-mail: sales@rstahl.com Website: www.rstahl.com

Installation of devices 8003/1•2 into the panel.

4.1 Dimensions

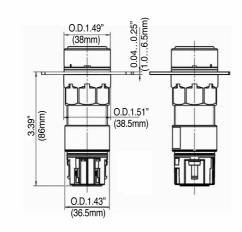

- Push the actuator from the front through the panel knock-out making sure the gasket is seated flat against the panel and lock it in position.
- Align the contact block to the three tabs of the actuator part and snap them together.
- Tighten the retainer nut against the panel.
- 4.2 Cage clamp terminals
 - Capacity 2 x 18 to 2 x 12 AWG.



4.3 Conductor connection to cageclamp terminals.



 Cut-away, showing cage-clamp terminals with capacity of 2 x 18 to 2 x 12 AWG.



 Open cage-clamp with a screwdriver (blade – 0.6 x 3.5mm) by inserting it into the square opening and hold the clamp open.



3. Insert the conductor into one of the rounded openings.




4. Remove the screw driver.

When installing devices without terminal cap, 8003/1•2, skip section 5.

INSTALLATION OPERATION & MAINTENANCE SHEET

5. Installation of devices 8003/1•1 into the panel.

5.1 Dimensions

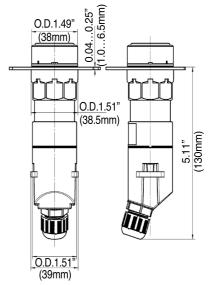

- **5.2** To open the terminal cap use a screwdriver with blade of 0.6 x 3.5 mm.
 - Position the screwdriver against one of the locking tabs.
 - Turn it 90°.
 - Pull the cap back a little and hold it in this position.
 - Position the screwdriver against the second locking tab.
 - Turn it 90°.
 - Pull the cap off.



5.3 Use flexible cord with O.D. 0.2" to 0.35"



- Open the cable gland.
- Slide the cord through the cable gland.
- Pull the cord into the terminal cap.

80 036 08 30 0 2/4 December 13, 2006



R. STAHL, INC.

9001 Knight Road Houston, TX 77054 Tel: 800-782-4357 FAX: 713-792-9301 E-mail: sales @ rstahl.com Website: www.rstahl.com

5.4 Prepare the cord.



- Remove the outer jacket for the length of the cable gland.
- Strip off the insulation of the conductor 0.25".

5.5 Conductor connection to cage-clamp terminals.



 Cut-away, showing cage-clamp terminals with capacity of 2 x 18 to 2 x 12 AWG.



 Open cage-clamp with a screwdriver (blade – 0.6 x 3.5mm) by inserting it into the square opening and hold the clamp open.




3. Insert the conductor into one of the rounded openings.



4. Remove the screw driver.


5.6 Closing the terminal cap.

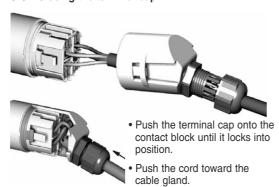

• Tighten the gland nut with 11 in. lbs. (1.2 N-m) torque.

INSTALLATION OPERATION & MAINTENANCE SHEET

5.7 Mounting the device into the panel

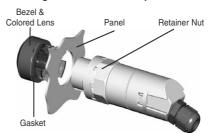

 Push the actuator from the front through the panel knock-out making sure the gasket is seated flat against the panel and lock it in position.



- Align the contact block to the three tabs of the actuator and snap them together.
- Tighten the retainer nut against the panel.

6. Maintenance

The only maintenance is a periodic inspection for damage and proper operation. Any damaged parts of the device and the panel need to be replaced promptly to ensure the electrical safety and explosion protection of the system.

Note:

The nature of these instructions is only informative and does not cover all of the details, variations or combinations in which this equipment may be used, its storage, delivery, installation, safe operation and maintenance.

Since conditions of use of the product are outside of the care, custody and control of the manufacturer, the purchaser should determine the suitability of the product for his intended use, and assumes all risk and liability whatsoever in connection therewith.

80 036 08 30 0 3/4 December 13, 2006





9001 Knight Road Houston, TX 77054 Tel: 800-782-4957 FAX: 713-792-9301 E-mail: sales@rstahl.com Website: www.rstahl.com

INSTALLATION OPERATION & MAINTENANCE SHEET

7. Parts and Accessories

Use only original spare parts and accessories, any others would invalidate the certification and warranty.

Item	Image	Description	Catalog Number
Actuator for Momentary Pushbutton		for type 8003/1••001	86 028 30 17 7 AA
Actuator for Emergency Stop Red Mushroom Key to Release from Maintained Position	63	for type 8003/1••009	86 028 30 17 7 AF
Actuator for Black Mushroom Key to Release from Maintained Position	65	for type 8003/1••006	86 028 30 17 7 AQ
Actuator for Emergency Stop Red Mushroom Maintained Action		for type 8003/1••010	86 028 30 17 7 AG
Actuator for Emergency Stop Red Mushroom Maintained Action (Jumbo)		for type 8003/1••015	86 028 30 17 7 AH
Actuator for Mushroom Maintained Black with Red Legend Disk		for type 8003/1••012	86 028 30 17 7 AR
Actuator for Black Mushroom Momentary Action		for type 8003/1••003	86 028 30 17 7 AB
Actuator for Key-Operated Selector Switch		2 Positions for type 8003/1••008-2 3 Positions for type 8003/1••008-3	86 028 30 17 7 AD 86 028 30 17 7 AE
Actuator for Rotary Selector Switch		for type 8003/1••726 2 Pos. maintained/maintained 2 Pos. maintained/spring return 3 Pos. free codeable*/maintained/free codeable*	86 028 30 17 7 AI 86 028 30 17 7 AS 86 028 30 17 7 AK
Actuator for Rotary Selector Switch, Pad-lockable		for type 8003/1••727 2 Pos. maintained/free codeable* 3 Pos. free codeable*/maintained/free codeable*	86 028 30 17 7 AL 86 028 30 17 7 AM
Spare Key		MS 1	3746050
Close-Up Plug		for unused openings	86 028 01 58 7

^{*} All necessary parts to coat the actuator, either spring return or maintained are included in the package.

80 036 08 30 0 4/4 December 13, 2006



